

- The **E** and **H** field component are **perpendicular** to each other and **transverse to the radial direction of propagation**
- The **E** and **H** field component are in **time phase**
- The **E** and **H** field component are both varying **inversely with the distance** to the dipole
- The **spherical wave** can be locally considered as a **plane wave**

with

$$\vec{H} = \frac{\hat{r} \times \vec{E}}{\eta}$$

in practice we can assume

$$\frac{E_\theta}{H_\phi} \approx \eta$$

We can compute the Poynting vector for the field (**infinitesimal dipole**)

$$\vec{W} = -\frac{1}{R\epsilon_0} \vec{E} \times (\vec{H}^*) = \hat{r} \frac{1}{|E_\theta|^2} \hat{r} \eta |kI_o l|^2 \sin^2 \theta$$


CLASES PARTICULARES, TUTORÍAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70

ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP: 689 45 44 70

Cartagena99

- Infinitesimal Dipole (short dipole)
- How we can represented the radiated power?

- It's a function of spatial variables (θ, ϕ)
- 3D or 2D plots in specific planes
- No energy is radiated by the dipole along the direction of the dipole axis
- Maximum radiation occurs in $\theta=90^\circ$ (broadside direction)

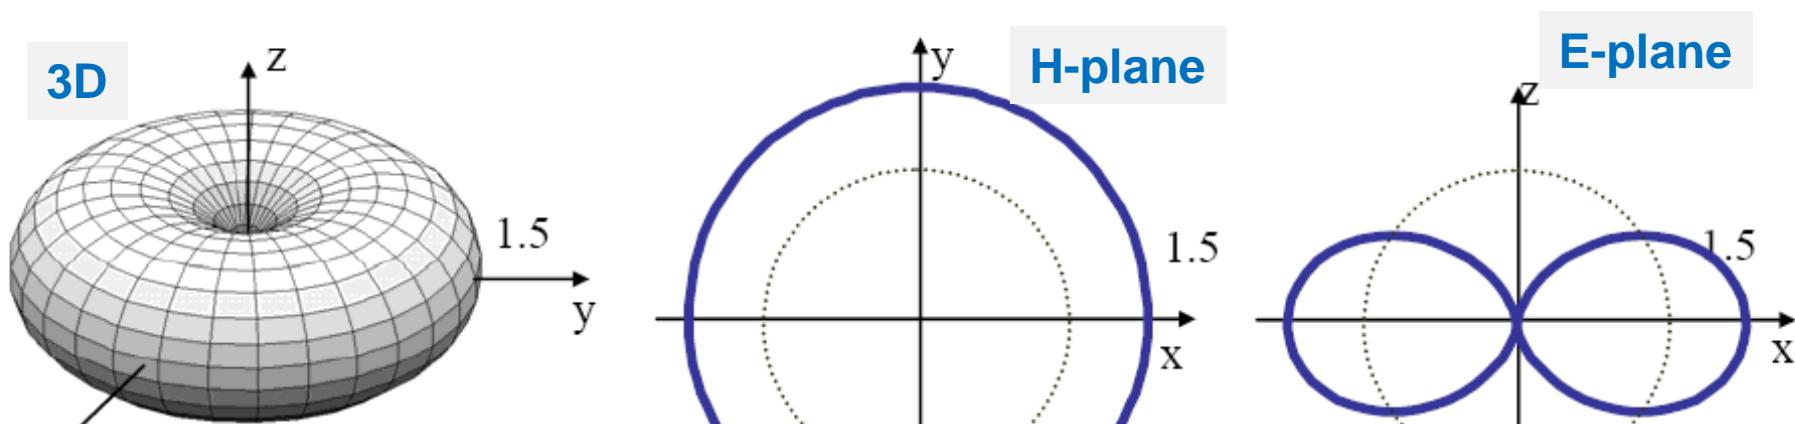

Cartagena99


CLASES PARTICULARES, TUTORÍAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70

ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP: 689 45 44 70


□ Antenna performance consist of two aspects: its radiation properties and its impedance:

- To match the antenna and the line impedances
- To radiate and receive electromagnetic energy effectively in some directions (depending on the application)

transmission

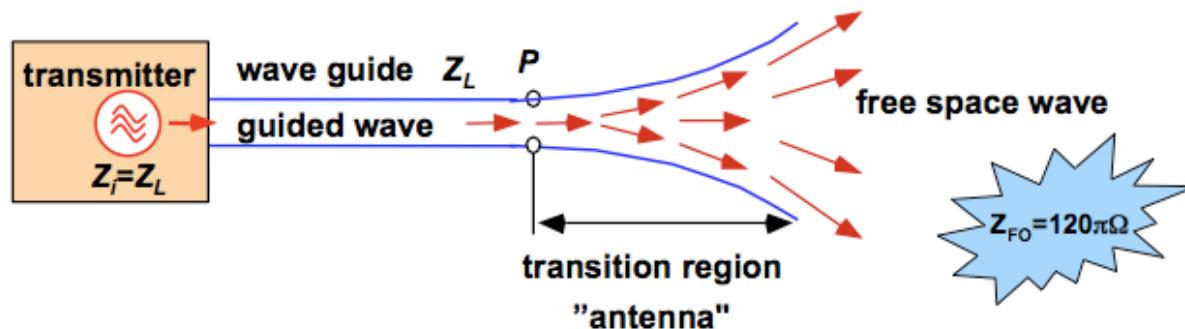

reception

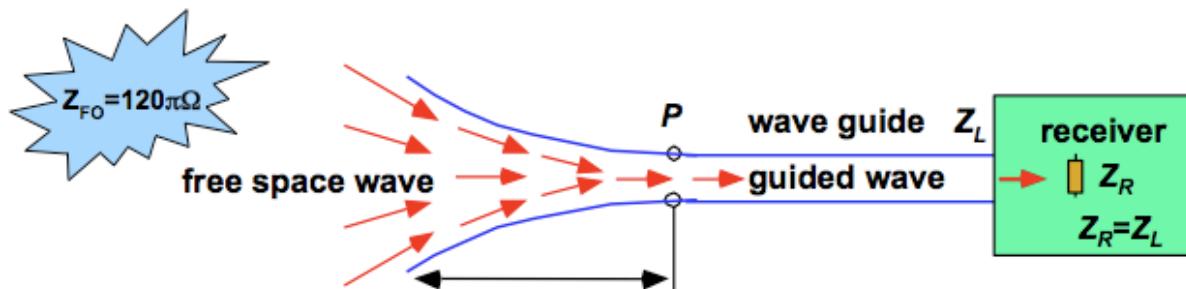



Cartagena99

CLASES PARTICULARES, TUTORÍAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70


ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP: 689 45 44 70

Fundamentals of radiation


Hertzian Dipol

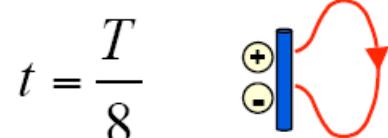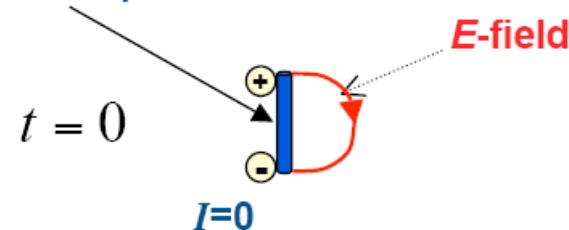


$$t = \frac{T}{4}$$

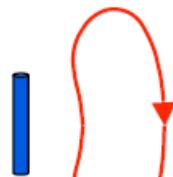

$$t = \frac{3T}{8}$$

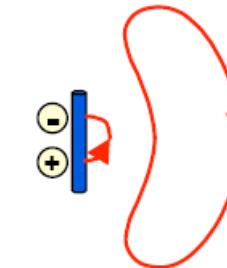

$$t = \frac{T}{2}$$

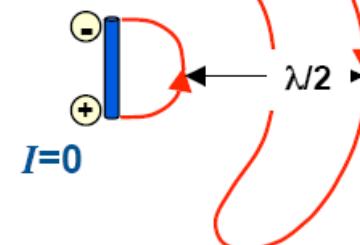

CLASES PARTICULARES, TUTORIAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70

ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP: 689 45 44 70

Cartagena99

Radiated field in... far-field approximation

- The antenna radiates an electromagnetic field


$$\vec{E}_{rad} \quad \vec{H}_{rad}$$

The radiation density is described by Poynting's vector...

$$W_{rad} = \frac{1}{2} [\vec{E}_{rad} \times \vec{H}_{rad}^*]$$

Very far from the antenna

$$W_{rad} = \frac{1}{2\eta} |\vec{E}_{rad}(r, \theta, \phi)|^2$$

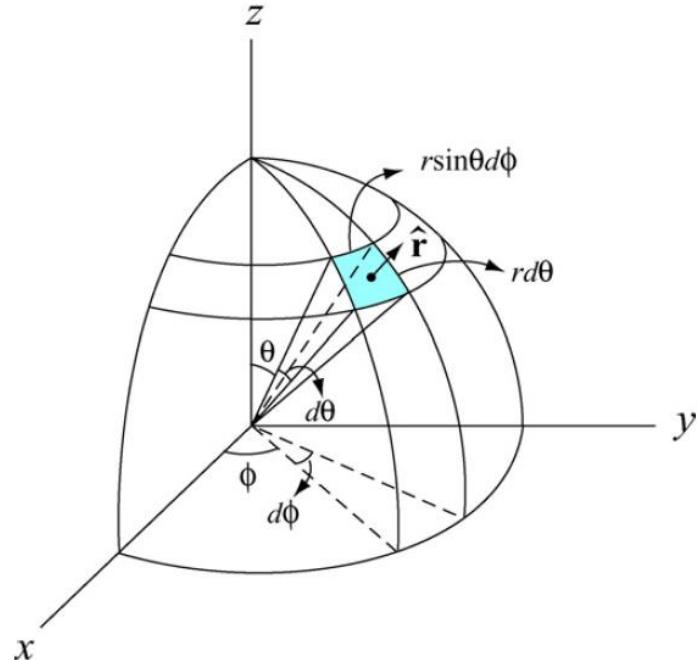

Spherical coordinates

Cartagena99

CLASES PARTICULARES, TUTORÍAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70

ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP: 689 45 44 70

Radiation intensity

Is the power density radiated per unit solid angle, in a particular direction, by an antenna

$$U = r^2 W_{rad} \quad (\text{W/sr})$$

Far field approximation

$$\vec{W} = \frac{1}{2} \operatorname{Re}(\vec{E} \times \vec{H}^*) \quad (\text{W/m}^2)$$

$$U \approx \frac{r^2}{2\eta} [|E_\theta|^2 + |E_\phi|^2]$$

$$P_{rad} = \oint_{\Omega} U d\Omega = \int_0^{2\pi} \int_0^{\pi} U(\theta, \phi) \sin \theta d\theta d\phi$$

CLASES PARTICULARES, TUTORÍAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70

ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP: 689 45 44 70

Cartagena99

Radiation Pattern

- It is a KEY parameter which gives the spatial distribution of the energy that the antenna radiates

- It is a graphical representation of the antenna radiation properties as a function of the angular coordinates.
- We compute the radiation pattern as the **radiation intensity divided by its maximum value**
- The radiation pattern is a **normalized function** of variables (θ, ϕ) in a spherical coordinate system.

$$r(\theta, \phi) = \frac{U(\theta, \phi)}{U_{max}}$$

In certain cases it is found convenient to plot the antenna pattern on a


CLASES PARTICULARES, TUTORÍAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70

ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP: 689 45 44 70


Cartagena99

Radiation Pattern


- Some examples of radiation pattern geometries

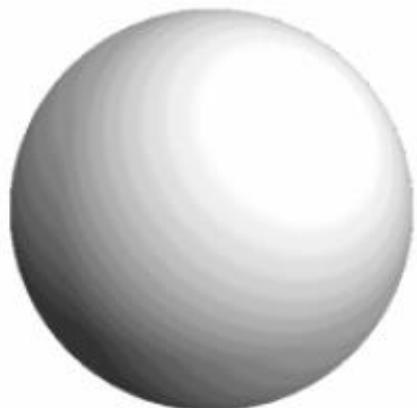


Isotropic

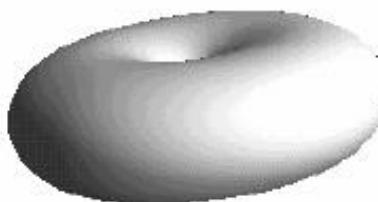

Omniazimuthal

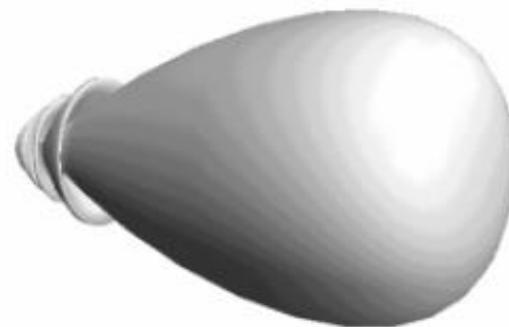

Directive

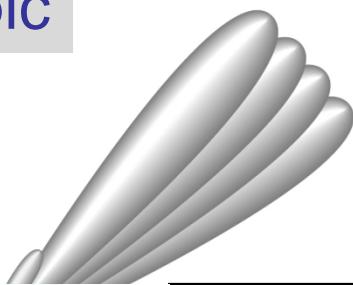

Multibeam pattern

CLASES PARTICULARES, TUTORÍAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70

ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP: 689 45 44 70

Cartagena99

Isotropic Antenna

□ **IDEAL antenna** which radiates the same power intensity in all directions




- It is used as a reference to define antenna parameters
- To exist would require a point source
- Radiated power density would be the same in all direction.

$$P_{iso} = \oint_{\Omega} U_o d\Omega = U_o 4\pi$$

$$U_o = \frac{P_{rad}}{4\pi}$$

$$W_{iso} = \frac{P_{rad}}{4\pi r^2}$$

The radiation intensity is constant over all space and also the pattern

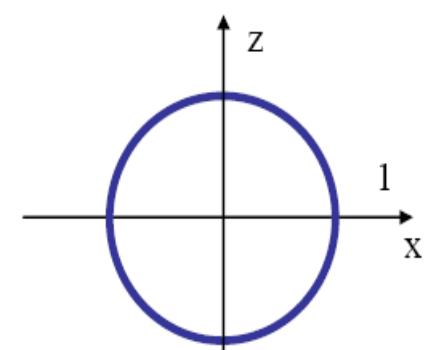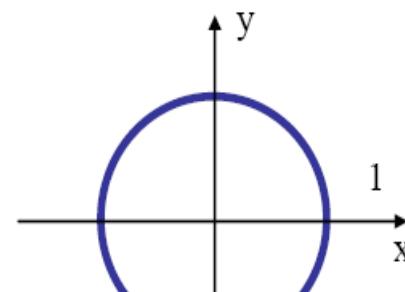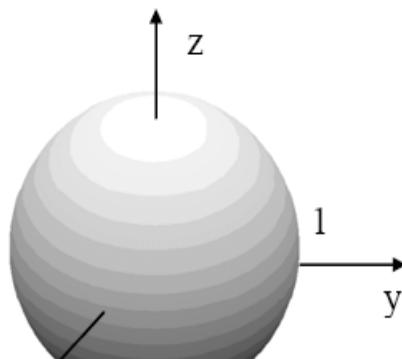


Cartagena99

CLASES PARTICULARES, TUTORÍAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70


ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP: 689 45 44 70

Representative plots of the radiation pattern

Field pattern

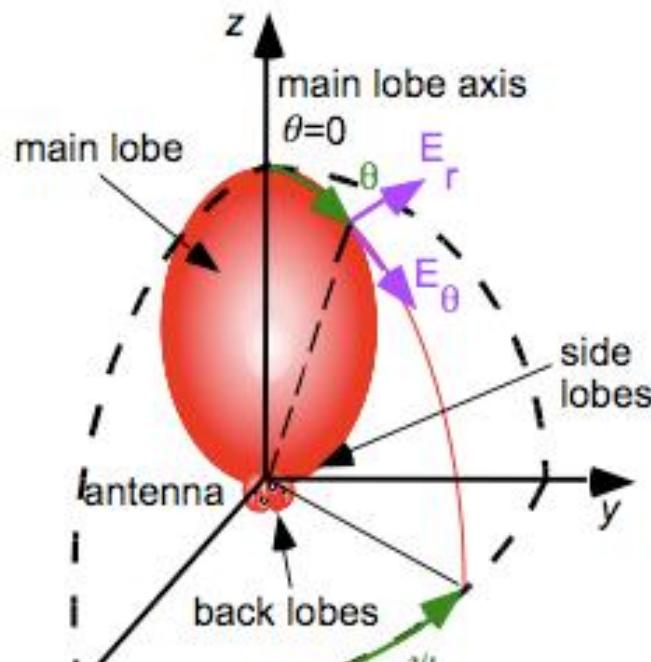

Power pattern

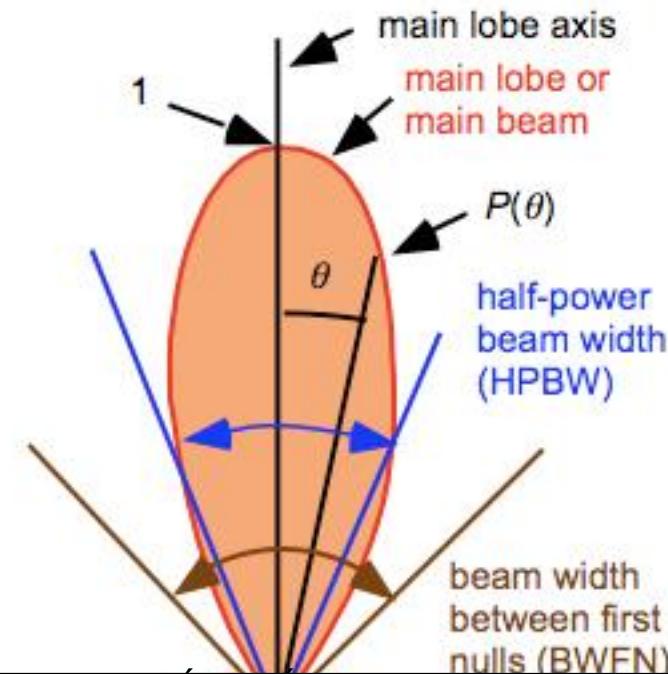

Cartagena99

CLASES PARTICULARES, TUTORÍAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70

ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP: 689 45 44 70

Directivity

Directivity: is defined as the ratio of the radiation intensity in a certain direction to the radiation intensity of a reference antenna


$$D = \frac{U}{U_{ref}}$$

$$D = \frac{U(\theta, \phi)}{U_{iso}(\theta, \phi)} = 4\pi \frac{U(\theta, \phi)}{P_{rad}}$$

Isotropic Antenna

D=1 (0 dB)

Usually we consider the isotropic radiator as the reference antenna

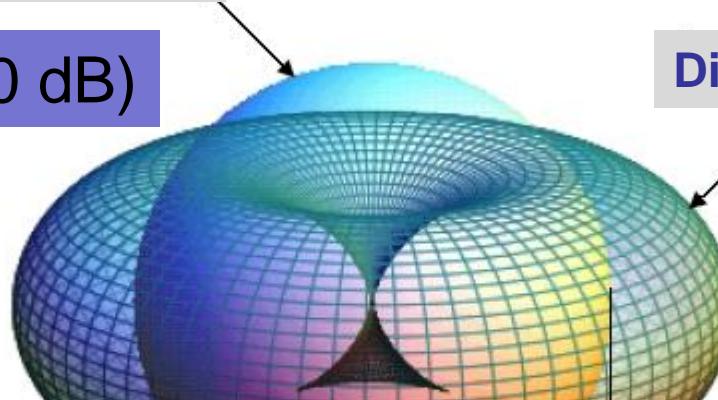

Directive Antenna

D>1 (0 dB)

$$D = \frac{U_{max}}{U_o} = 4\pi \frac{U_{max}}{P_{rad}}$$

Maximum value of D


Cartagena99

CLASES PARTICULARES, TUTORÍAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70

ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP: 689 45 44 70

Directivity

- Antenna beam solid angle is defined as the solid angle through which all the power of the antenna will be flow if its radiation intensity is constant (and equal to the maximum value of U) for all angles within Ω_A

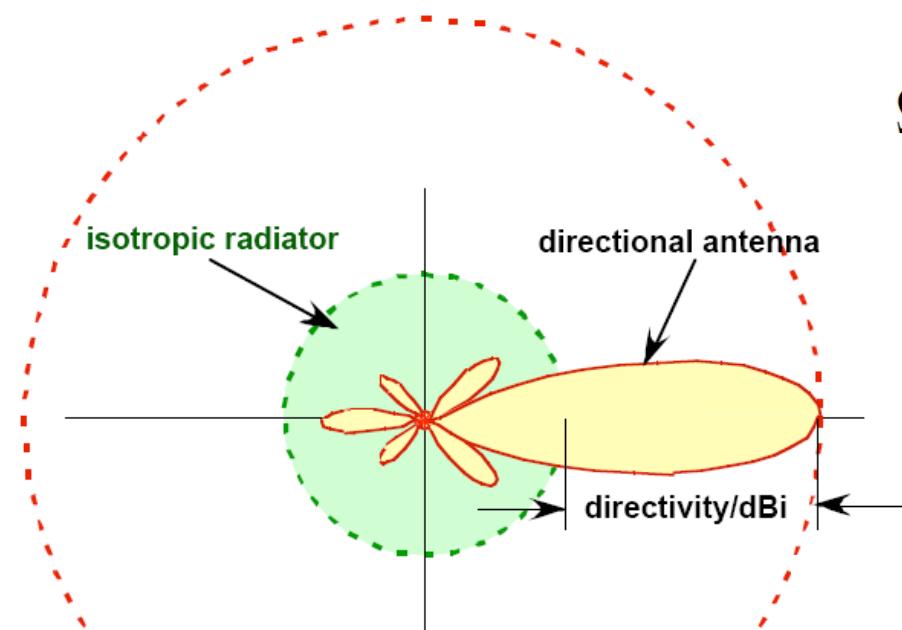

$$\Omega_A = \int_0^{2\pi} \int_0^{\pi} r(\theta, \phi) \sin \theta d\theta d\phi$$

$$D = \frac{4\pi}{\Omega_A}$$

The directiviy is entirely determined by pattern shape

CLASES PARTICULARES, TUTORÍAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70

ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP:689 45 44 70

Cartagena99

Gain and Efficiency

- The Gain is a parameter that takes into account the efficiency of the antenna as well as its directional capabilities

$$e = \frac{P_{rad}}{P_{in}}$$

$$G = 4\pi \frac{U}{P_{in}}$$


$$D_g = 4\pi \frac{U}{P_{rad}}$$

$$G_{\max} = e \cdot D_{\max}$$

$$e \leq 1$$

The definition for the **Gain** is similar to the **Directivity**, except that it is referred to the input power **P_{in}**, rather than the radiated power **P_{rad}**

$$G_{\max} \leq D_{\max}$$

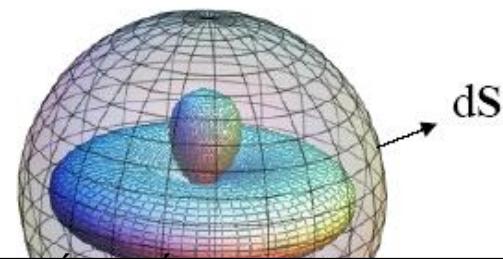

Total efficiency →

$$e = e_r \cdot e_i \cdot e_a$$


CLASES PARTICULARES, TUTORÍAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70

ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP: 689 45 44 70

Cartagena99

Gain

- The Gain of the antenna is the maximum value of the $G(\theta, \phi)$ function \Rightarrow **Usually we need to measure it!**

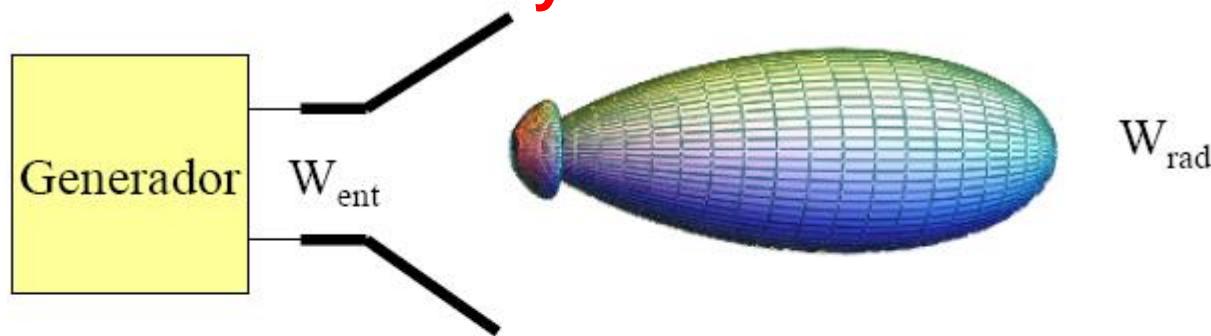

$$G(\theta, \phi) = \frac{P_{rad}(\theta, \phi)}{\frac{W_{ent}}{4\pi r^2}}$$

$$D(\theta, \phi) = \frac{P_{rad}(\theta, \phi)}{\frac{W_{rad}}{4\pi r^2}}$$

Cartagena99

CLASES PARTICULARES, TUTORÍAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70

ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP: 689 45 44 70


Gain and efficiency

Ant. Efficiency η :

$$\eta = \frac{G}{D}$$

Gain G:

$$G_i = \frac{dP_T / d\Omega}{P_{in} / 4\pi}$$

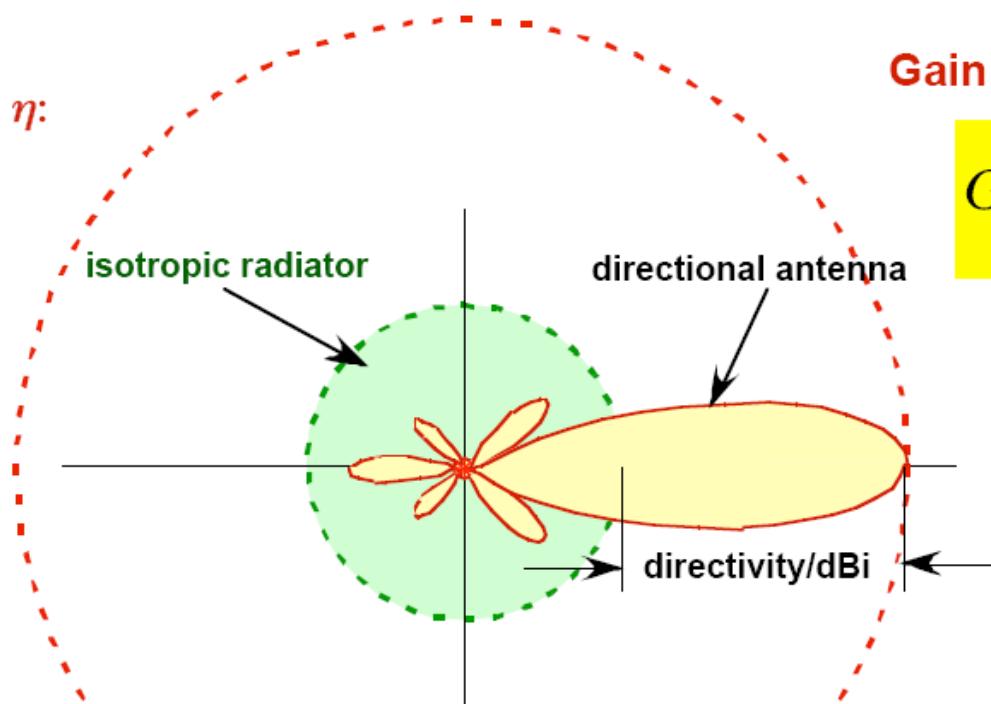

Directivity D:


$$D_i = \frac{dP_T / d\Omega}{P_{in} / 4\pi}$$

CLASES PARTICULARES, TUTORÍAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70

ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP: 689 45 44 70

Cartagena99

Transmission lines

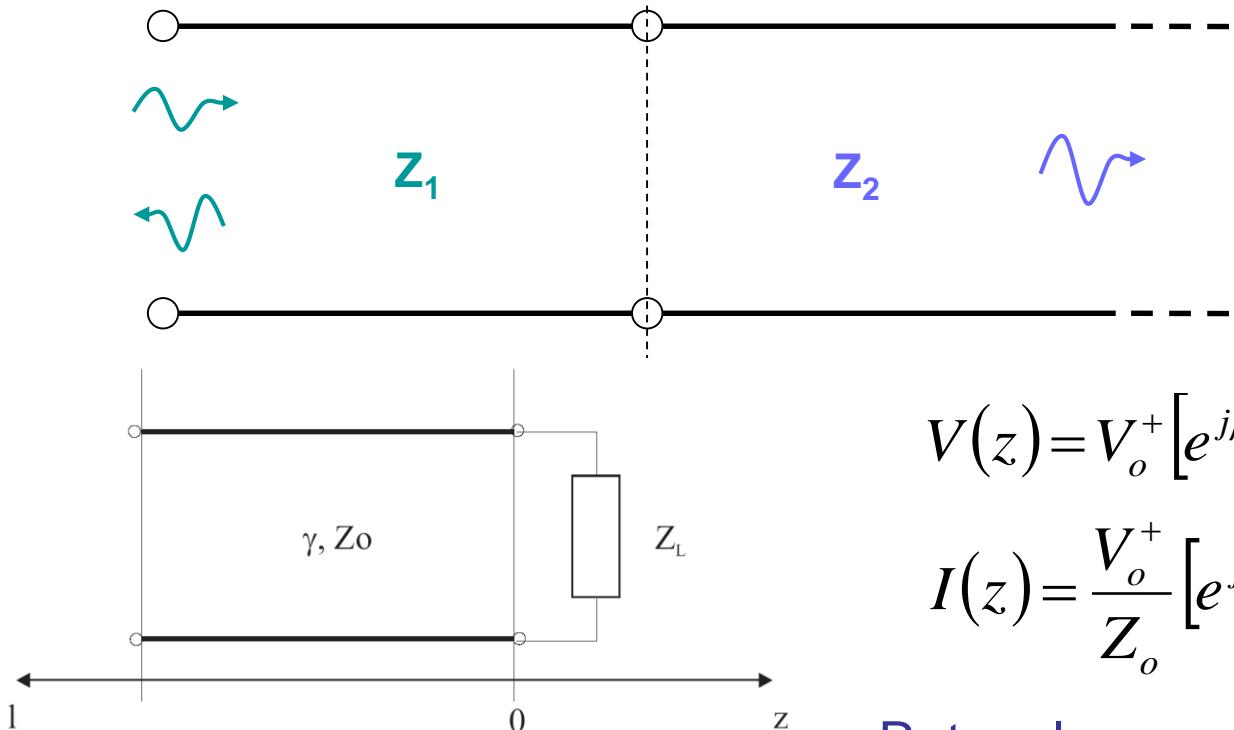

$$V(z) = V_o^+ [e^{j\beta l} + \Gamma \cdot e^{-j\beta l}]$$

$$I(z) = \frac{V_o^+}{Z_o} [e^{j\beta l} - \Gamma \cdot e^{-j\beta l}]$$

Return losses:

$$RL = -20 \cdot \log(|\Gamma|) \text{ dB}$$

$$\Gamma = \frac{V_o^-}{V_o^+} = \frac{Z_L - Z_o}{Z_L + Z_o}$$

CLASES PARTICULARES, TUTORÍAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70


ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP: 689 45 44 70

Input Impedance / Bandwidth

- The input impedance of an antenna is generally a function of frequency. Thus the antenna will be matched to the transmission line only within a bandwidth

$$\Gamma = \frac{Z_{ant} - Z_{ltx}}{Z_{ant} + Z_{ltx}}$$

Γ is the voltage reflection coefficient

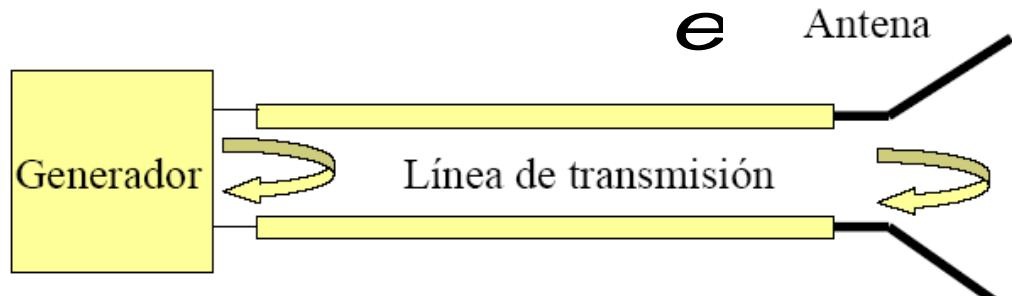

The **bandwidth** can be considered to be the **range of frequencies**, where the antenna characteristics (**input impedance**, pattern, polarization, gain, etc) are within an acceptable value

For example, the reflection efficiency determines the

CLASES PARTICULARES, TUTORÍAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70

ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP:689 45 44 70

Cartagena99

SWR

- Normally when we have an antenna we characterize the **Voltage Standing Wave Ratio**

$$0 \leq \Gamma \leq 1$$

$$SWR = \frac{1+\Gamma}{1-\Gamma}$$

$$1 \leq SWR \leq \infty$$

- We need to achieve a very low SWR if we want to design an efficient antenna (in terms of reflection...)

Cartagena99

CLASES PARTICULARES, TUTORÍAS TÉCNICAS ONLINE
LLAMA O ENVÍA WHATSAPP: 689 45 44 70

ONLINE PRIVATE LESSONS FOR SCIENCE STUDENTS
CALL OR WHATSAPP: 689 45 44 70